 




English
Français
Deutsch
Italiano
Nederlands
Español
日本語

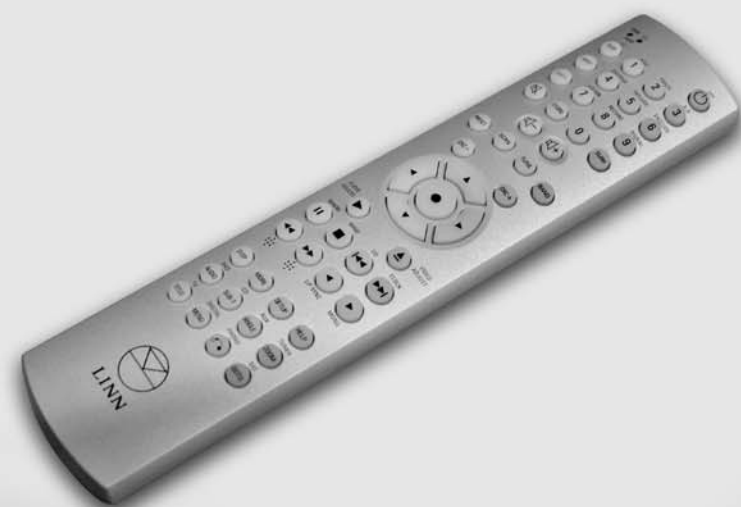

 
LINN HANDSET

Owner's Manual

Your new Linn handset





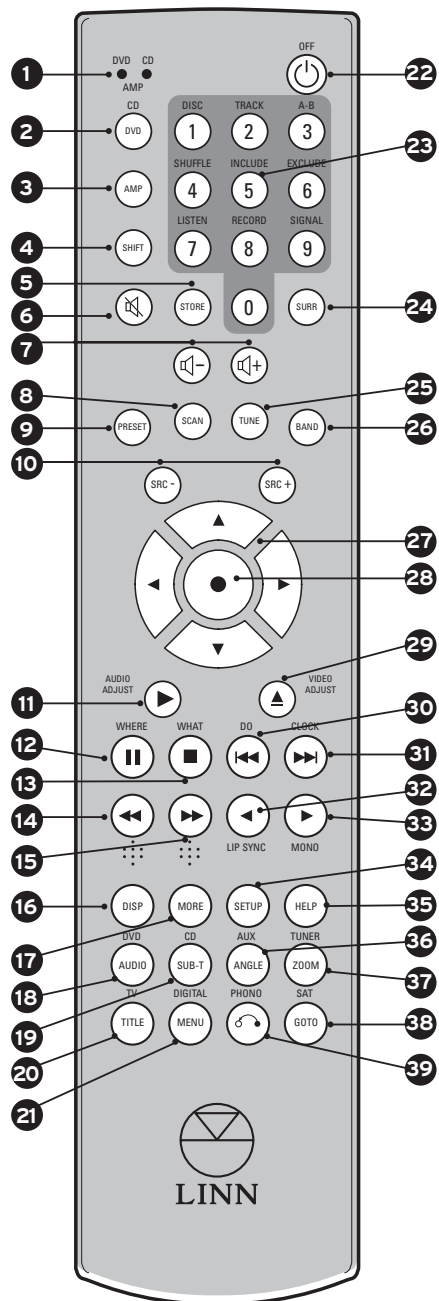




Your Linn product has been shipped with our latest handset.

This handset has been designed to provide simpler, more intuitive control over a range of Linn products. The layout and functionality of the keys on the new handset has not altered significantly from the handset detailed in the product's Owner's Manual, so for most operations you may not need to refer to the details that follow. However, please read this document to familiarise yourself with the changes between the new handset and the operation of the handset as detailed in the Owner's Manual.



Handset keys

- 1 LEDs Indicate the mode of the handset when a key is pressed
- 2 DVD, CD Puts handset into Disc mode. Allows operation of an auxiliary Linn CD player
- 3 AMP Puts handset into Amp mode (functions marked in blue)
- 4 SHIFT Allows access to functions marked in red
- 5 STORE Stores disc playback and tuner information
- 6 Mutes/unmutes the audio to the loudspeakers and headphones
- 7 Adjust the volume level
- 8 SCAN For scanning for tuner signals
- 9 PRESET For selecting tuner presets
- 10 SRC-, SRC+ (source -, source +) Change source
- 11 , AUDIO ADJUST Plays a disc. Accesses adjustable audio features
- 12 , WHERE* Pauses a disc
- 13 , WHAT* Stops a disc
- 14 , * Fast search backwards
- 15 , * Fast search forwards
- 16 DISP (display) Changes the time display on the front panel when playing a disc
- 17 MORE Not currently functional
- 18 AUDIO, DVD** For selecting audio languages on DVDs
- 19 SUB-T, CD** Switches DVD subtitles on or off
- 20 TITLE, TV** Accesses the title menu on a DVD (if one is present on the disc)
- 21 MENU, DIGITAL** Accesses the main menu on a DVD

 
- 22  **OFF** Brings unit out of, or puts into, standby mode. Sends 'off' (i.e. puts into standby) command to all available Linn equipment
- 23 **Digits 0-9, shifted functions** Numeric keys. Access to functions marked in red
- 24 **SURR (surround)** Cycles through sound formats
- 25 **TUNE** For selecting a tuner frequency
- 26 **BAND** Changes tuner band
- 27  For navigating setup menus and adjusting various features
- 28  ('enter') For selecting settings
- 29  **VIDEO ADJUST** Opens/closes the disc drawer. For selecting the type of output video signal
- 30  **DO*** Previous chapter/track selection
- 31  Next chapter/track selection
- 32  Fast scan backwards
- 33  Fast scan forwards
- 34 **SETUP** Enters/exits on-screen setup menus
- 35 **HELP** Accesses on-screen help information
- 36 **ANGLE, AUX**** Selects available viewing angles on DVDs
- 37 **ZOOM, TUNER**** Magnifies screen image
- 38 **GOTO, SAT**** For jumping to a particular title, chapter or time on a disc
- 39  (return), **PHONO**** For moving back through multi-level menus on DVDs

* Used if the unit is installed in a Linn KNEKT system.

** Direct source keys for selecting auxiliary sources.

Handset modes

The new Linn handset has two operating modes, Disc mode and Amp mode.

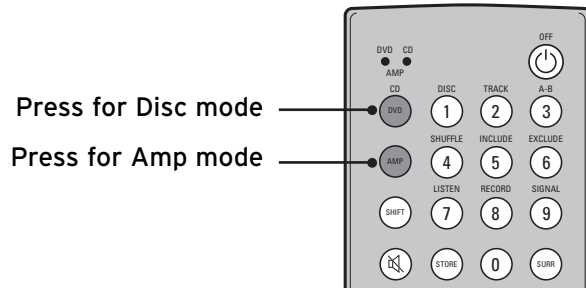

UNIDISK 1.1 and 2.1

For operating a UNIDISK 1.1 or 2.1 the handset should be in Disc mode.

- To put the handset in Disc mode, press **DVD**.

UNIDISK SC

For operating a UNIDISK SC the handset should be in Disc mode when you want to use the disc keys (play, pause, skip forward, etc.) and should be in Amp mode when you want to use the following pre-amplifier functions: trim adjustment, balance adjustment, auxiliary source selection.

- To put the handset in Disc mode, press **DVD**.
- To put the handset in Amp mode, press **AMP**.

KISTO, KINOS and EXOTIK

For operating a KISTO, KINOS or EXOTIK the handset should be in Amp mode. This allows access to the functions marked in blue (Audio Adjust, Lip Sync, etc.).

- To put the handset in Amp mode, press **AMP**.

You may find that on occasion when using the handset that the unit does not respond as expected. The likely reason is that the handset is in the wrong operating mode. To correct this, simply press either the **DVD** key for Disc mode, or the **AMP** key for Amp mode.

Changes from the Owner's Manual

The changes between the functionality of the new Linn handset and the instructions in the Owner's Manual are as follows:

UNIDISK 1.1 and 2.1

The **AUDIO** key on the new handset replaces the **AUDIO ADJUST** key.

The **SHIFT** key on the new handset replaces the **PROG** key.

The **DISC** key on the new handset replaces the **REPEAT** key for the **Repeat disc** function.

The **A-B** key on the new handset replaces the **REPEAT** key for the **Repeat section** function.

The most significant change to the operation of the UNIDISK 1.1 and 2.1 is that the **DISP** key on the new handset replaces the **VIDEO ADJ** key. This means that the Video Output section of the manual on page 7, should read as follows:

Video Output

In order to set up your UNIDISK 1.1/2.1 you must first ensure that the unit is outputting the correct video signal type for your display device.

To do this:

- Press and hold **DISP** (display) on the handset. The current setting for the output video format is shown on the front panel display. To change the video format, press ◀(left) or ▶(right). The options available are PAL, NTSC, and Native (for display devices that accept both PAL and NTSC).

UNIDISK SC

The ► and || keys on the new handset replace the combined ►/|| key.

The ■ and ▲ keys on the new handset replace the combined ■/▲ key.

The **DISC** key on the new handset replaces the **ALL** key.

The **TRACK** key on the new handset replaces the **ONE** key.

The **AUDIO ADJUST** key on the new handset replaces the **ADJUST** key.

The **MENU** key on the new handset replaces the **DVD** key for selecting certain DVD-Video and DVD-Audio menus, and for turning PBC on or off when viewing Video CDs and Super VCDs.

Change to User Options

In the User Options (see Owner's Manual pages 30 - 31) the **Play Command**, **Stop Command** and **Repeat Command** options have been replaced with a single **Handset** option (see *Using an older Linn handset*, opposite).

KISTO, KINOS and EXOTIK

To select a source using the handset:

- Repeatedly press or hold the **SRC-** or **SRC+** key.

or use the method as detailed in the manual.

The **AUDIO ADJUST** key on the new handset replaces the **AUDIO ADJ** key.

Pressing the **SHIFT** key followed by the **RECORD** key on the new handset replaces pressing the Ⓞ (record) key.

Using an older Linn handset

If you already own a Linn product which uses one of the Linn handsets shown below, you will be able to use that handset with your new equipment, provided that the handset has the functionality you require.



UNIDISK 1.1 & 2.1, KISTO, KINOS & EXOTIK handset
Silver top surface,
grey bottom surface



UNIDISK SC handset
Grey top surface,
grey bottom surface

If you wish to use one of the handsets shown above, you will have to change the Handset setting on your new Linn equipment. To do this, please follow the appropriate instructions on the next page.

UNIDISK 1.1 & 2.1

1. Put the unit into standby.
2. Hold ▲ on the front panel until the display shows User Options.
3. Repeatedly press △ (up) on the handset until the **Handset** item is shown.
4. Use ◀ (left) / ▶ (right) to select the **Silver and grey** option.
5. Press ► to save the new setting and exit User options.

UNIDISK SC

1. Put the unit into standby.
2. Hold ▲ on the front panel until the display shows User Options.
3. Repeatedly press △ (up) on the handset until the **Handset** item is shown.
4. Use ◀ (left) / ▶ (right) to select the **All grey** option.
5. Press ► to save the new setting and exit User options.

KISTO, KINOS & EXOTIK

1. Press **SETUP** on the handset.
2. Repeatedly press ▽ (down) to highlight the **General Setup** menu.
3. Press '**enter**' (central key on the navigation disc).
4. Repeatedly press ▽ (down) to highlight the **Handset** item.
5. Press '**enter**'.
6. Use △ (up) / ▽ (down) to select the **Silver and grey** option.
7. Press '**enter**'.
8. Repeatedly press ▽ (down) to highlight **Save**.
9. Press '**enter**'.
10. Press **SETUP**.

If in the future you wish to use the all-silver handset, follow the instructions above for changing the Handset setting and select the **All silver** option.