



UNIDISK 1.1 and 2.1

Addendum to Owner's Manual

New Audio Setup option (for page 11)

Downmix

Default setting: **Pure Stereo**

If you are going to apply Dolby Pro Logic decoding to the audio signal, set to **LtRt**.

If you are not going to apply Dolby Pro Logic decoding to the audio signal, set to **Pure Stereo**.

New table of user options (for page 23)

The following table shows the UNIDISK Player's user options, briefly describes them and lists the available settings for each. Default settings are shown in bold (and are marked with a '*' on the front panel display).

Option	Description	Settings
Display brightness	Allows adjustment to the brightness of the front panel display. When set to AUTO the unit will select a brightness level based on the ambient light level in the room (the greater the ambient light level, the brighter the display will be).	AUTO 2% to 100% (non-linear)
Sleep display delay	Sets the number of seconds that the unit is inactive for, before the sleep display (three dots) is shown on the front panel.	OFF 0m 10s to 5m 00s (in 10 sec steps)
Front panel IR commands	If set to ACCEPTED , unit will respond to commands received via the IR receiver on the front panel.	ACCEPTED IGNORED
Pass IR to REMOTE OUT	If set to ENABLED , passes commands received via the IR receiver on the front panel to REMOTE OUT . Will function even if the IR commands are disabled.	ENABLED DISABLED
Pass REMOTE IN to OUT	If set to ENABLED , passes RC5 commands received at REMOTE IN to REMOTE OUT .	ENABLED DISABLED
RS232 baudrate	Sets the baudrate for RS232 control.	9600 4800 to 230400 (8 settings)
RS232 events	If set to ENABLED , passes information regarding the internal status of the unit to an external device that accepts RS232 data.	ENABLED DISABLED
RS232 startup message	If set to ENABLED , will output an RS232 start message when the unit is switched on.	ENABLED DISABLED
CD commands	If an external CD player is connected to the UNIDISK Player and you want the UNIDISK Player to ignore CD handset commands, set to IGNORED .	ACCEPTED IGNORED
Scroll SACD text	ONCE : Track information on SACDs will scroll once across the front panel display. LOOP : Track information on SACDs will scroll repeatedly across the front panel display. NO : Track information on SACDs will not appear on the front panel display.	ONCE LOOP NO